



Anti-Vandal Mounts Available in High Impact PVC and High Security Metal for Correctional Facilities.



New PVC Mounting Instructions

Our new PVC Mounts available in RED, GREEN & BLACK(images attached). These are a PERMENANT MOUNT-once it's mounted & the iButton is inserted, there is no way to remove the mount or button except by destroying either! For mounting the Colored mount, all that would be required is one 1/2 to 3/4 inch fastener with countersunk head. Affix the mount onto a flat surface & insert the iButton using finger pressure. An audible click will be heard when the iButton is seated correctly.



Maximus Technologies Limited
P.O Box 31-217
Lower Hutt 5040
New Zealand
Phone: +64 4 567-5200
Fax +64 4 567-0600
Email sales@maximus.co.nz
www.maximus.co.nz




TOUR TRAX

Anti-Vandal Mounts High Security Metal for Correctional Facilities.

High Security Metal Mount-Instructions

A 1/2 to 3/4 inch fastener with countersunk head is required to securely affix the High Security Metal mount to a smooth, flat surface . To seat the iButton into the metal mount you will need to follow the procedure below:-

1. Secure Metal Mount to a Flat Surface using a 1/2 to 3/4 inch Countersunk Screw.
2. Secure iButton to Metal Ring "Flange" side down.
3. Use finger pressure to insert iButton into Metal Mount.
4. Assemble tool as shown in Diagram.
5. Using a Mallet, hammer iButton into Mount.

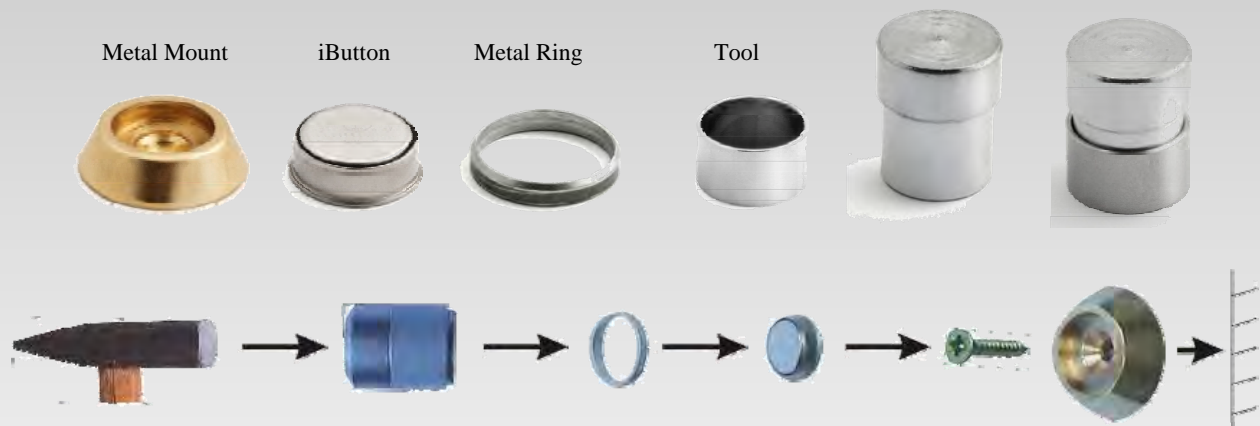

Above is a Graphical Diagram for Mounting Metal Mount



Above image depicts Assembled Mount & iButton

[Click Here](#) for Link to video clip. If Link does not work, please copy & paste the address below into your address bar in your Browser Window. Video Clip is in mpg format.

http://www.rhinorugged.com/download/AV_holder.MPG



Maximus Technologies Limited
P.O Box 31-217
Lower Hutt 5040
New Zealand
Phone: +64 4 567-5200
Fax +64 4 567-0600
Email sales@maximus.co.nz
www.maximus.co.nz